


Drawing Notes:

RhinoBond PVC Treadsafe plates should be installed in accordance with the site-specific windload calculation.

Overlap shown in this drawing for illustrative purposes only and is not indicative of where overlaps will be located in relation to installed RhinoBond PVC Treadsafe plates.

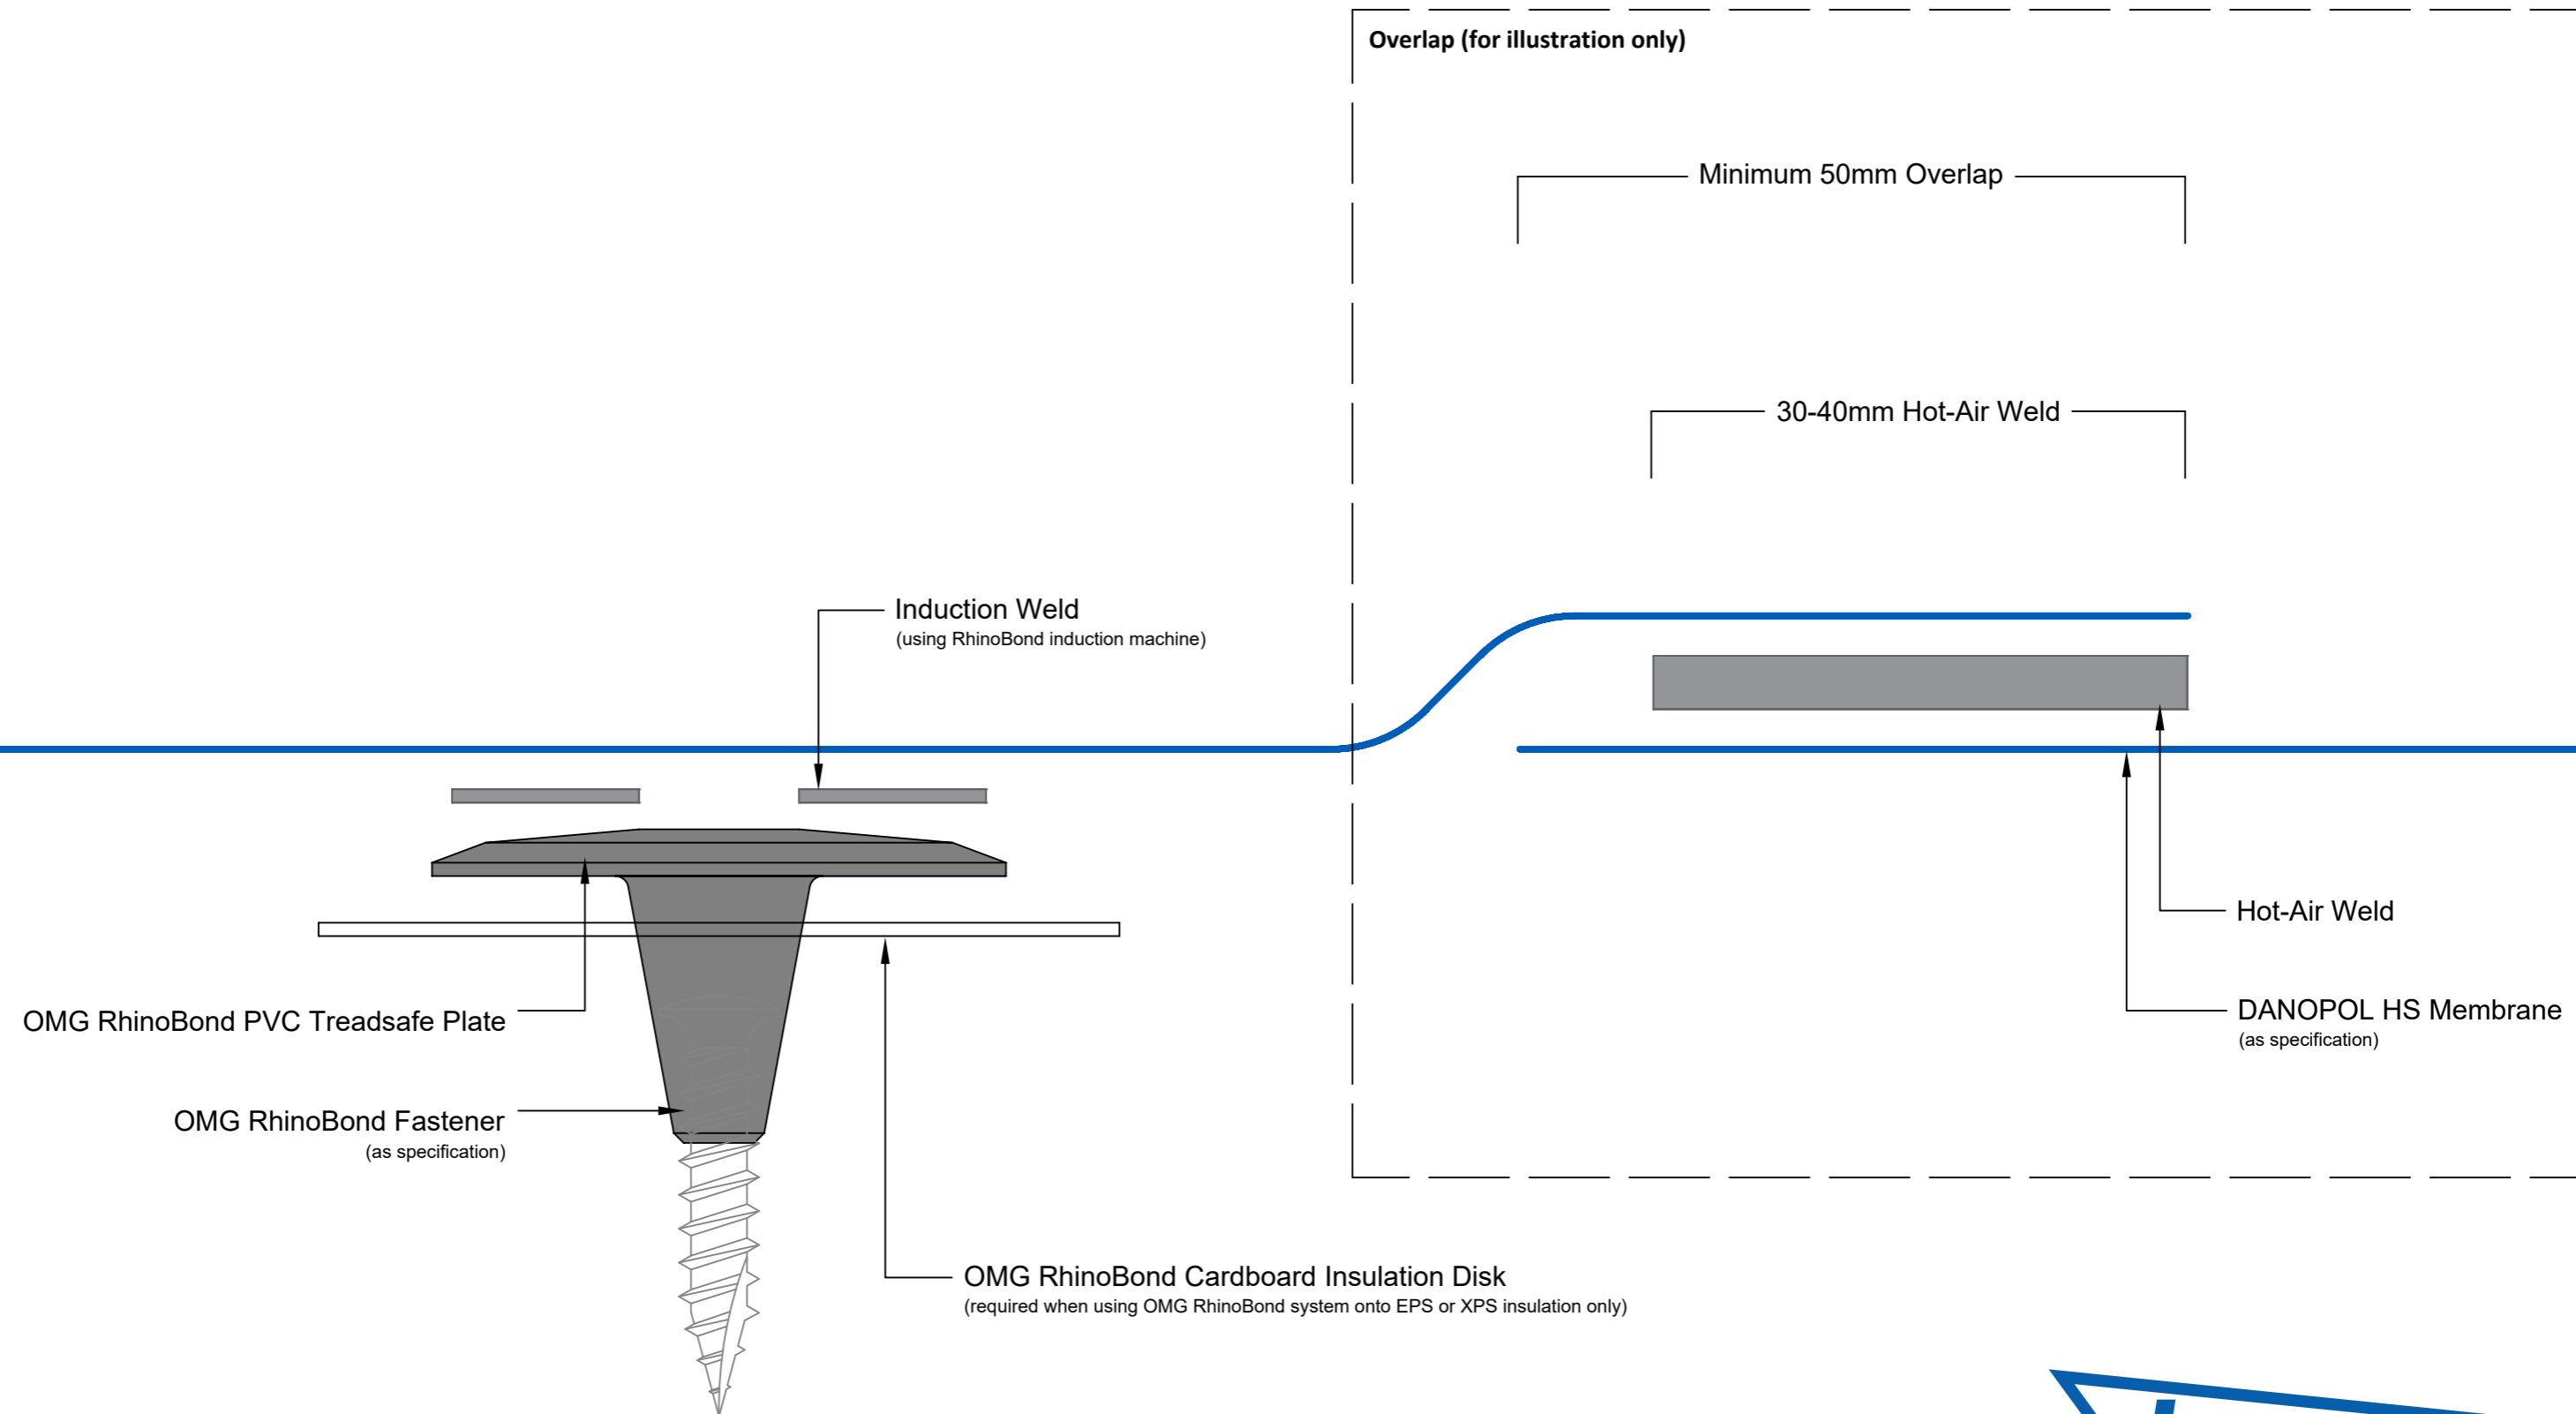

Drawing Number: DUK-S-(M)-102W	Revision: 00
Date Drawn: February 2019	Author: SL

Drawing Title:
RhinoBond Induction Attachment
Mechanically Fastened DANOPOL® Single Ply Membranes - Warm Roof



Building together

DANOSA UK Limited

Tel: 0845 074 0553 | www.danosa.co.uk | uktechnical@danosa.com