

Disclaimer: Drawings produced by DANOSA UK should be considered non-scalable and for illustrative purposes only. Issued design principals form instructions for the installation of DANOSA UK materials only and should be considered as part of an overall design rather than in isolation. Product 'Technical Datasheets' are available for all DANOSA UK products and should be consulted in conjunction with all issued DANOSA UK installation instructions. Drawings are subject to copyright and should not be reproduced without permission.

Drawing Notes:

Walkway and access route membranes should be installed directly onto the completed waterproofing.


Note A:

Walkway and access route membranes do not form part of the waterproofing system as the membranes are not waterproofing products. Products should be tack welded within the 40mm hot-air spot-weld zone to ensure a firm and secure attachment to the roof system.

200mm Spacing Between Lengths For Drainage

Hatch Indicates 40mm Hot-Air Spot-Weld Zone (see Note A)

Maximum 3000mm Lengths

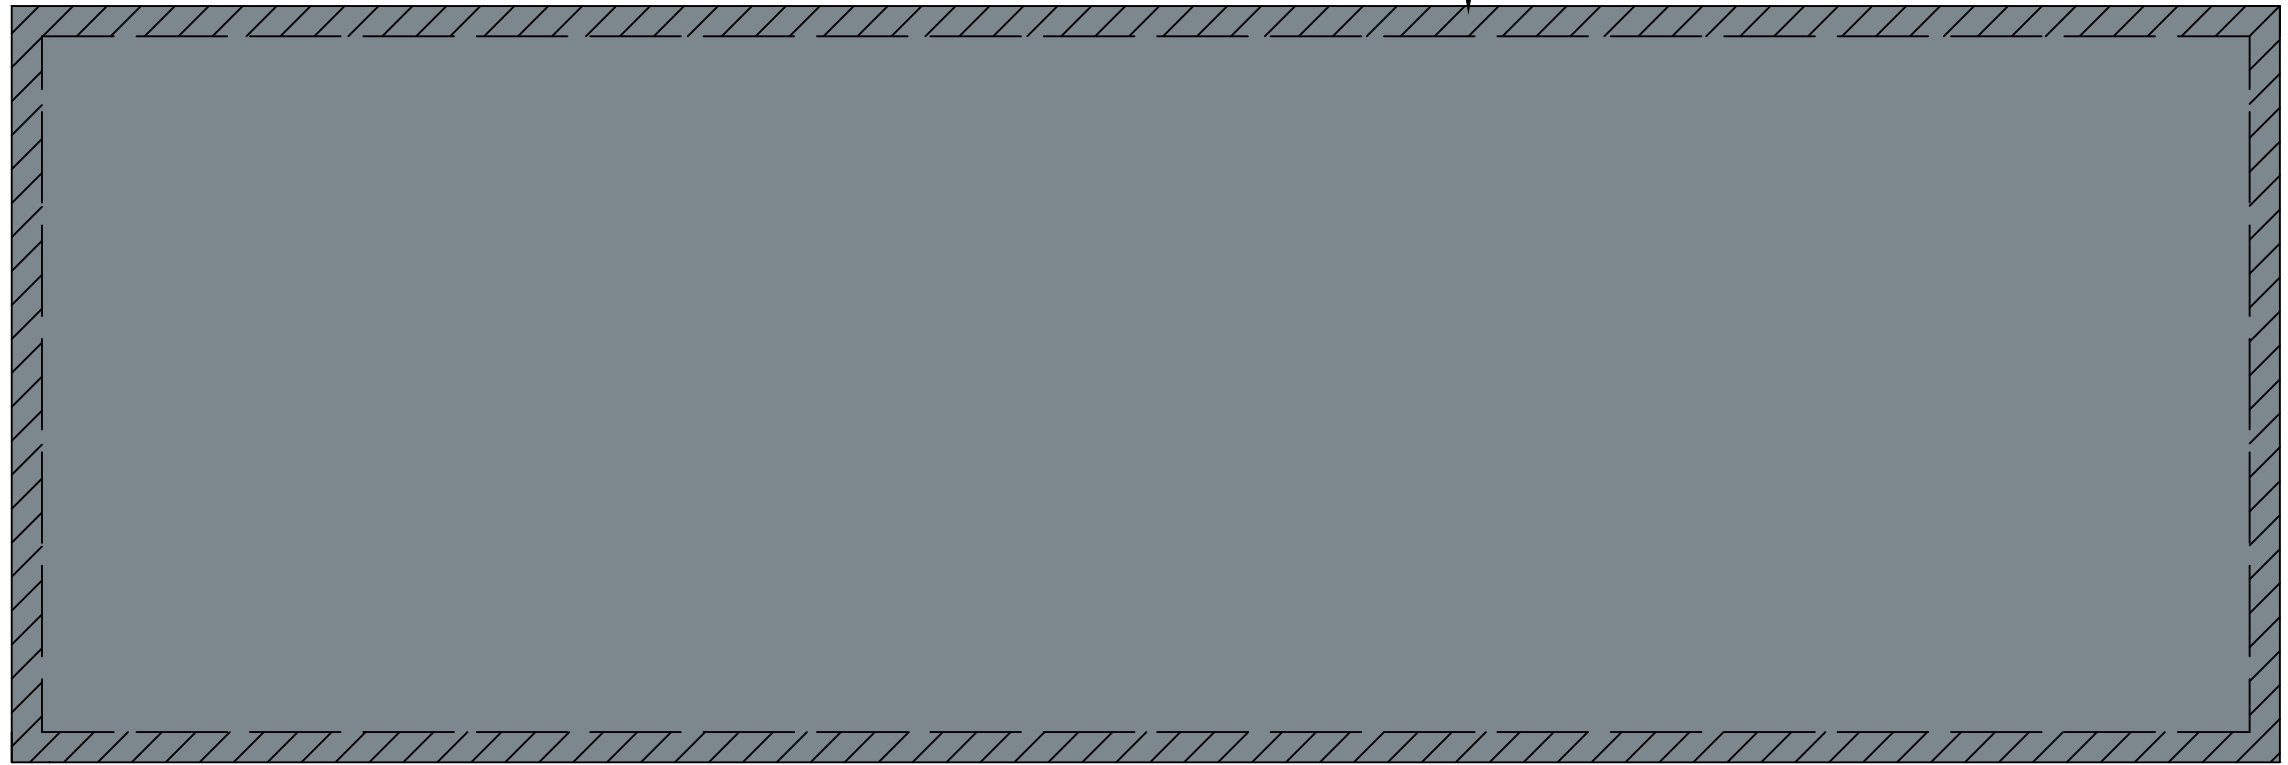

Drawing Number: DUK-S-(G)-120	Revision: 00
Date Drawn: March 2017	Author: SL

Drawing Title:
Walkway and Access Route Layout
Single Ply Membranes

